



Thank you for purchasing the What's Cookin' Fridge. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.



## **WARNING: Adult Assembly Required**

**WARNING:** Assembly kit contains parts with sharp edges.

**WARNING:** Assembly kit contains parts with sharp points.

**WARNING:** Anti tip-over kit must be installed before children can use this product.

**WARNING:** Package contains plastic bags that present suffocation risks for children.

**WARNING:** Assembly kit contains small parts that present choking hazards for children.

## **Hardware:**

### **Components Included:**

- 1 - Main Body      4 - 1/4" Screws
- 1 - Freezer Door    12 - 5/8" Screws
- 1 - Fridge Door    1 - Anti tip-over kit
- 2 - Door Handles

### **Tools Required (not included):**

- Phillips Head Screwdriver
- (We recommend the use of hand tools instead of power tools)

1. Lay Main Body of Fridge flat on side with pre-drilled holes facing up.
2. Attach Freezer and Fridge Doors using phillips head screwdriver by inserting (12) 5/8" screws through hinges into pre-drilled holes. Tighten the screws evenly until both doors are firmly attached.
3. Stand Fridge upright.
4. Insert (2) 1/4" screws into the Freezer Door, through the pre-drilled holes, from the inside. Make sure that screws fully protrude through the door.
5. Using a phillips screwdriver, carefully start each screw into the pre-drilled holes in the handles. Tighten the screws evenly until the handle is snug.
6. Repeat this procedure for the handle on the Fridge Door.

**Note:** The magnetic catch may need to be adjusted so that the child does not need to use excessive force to open the doors; this could cause the Fridge to tip if pulled too hard. The metal strikes are not designed to make full contact with the magnets. A small portion of the strike contacting the magnet is sufficient. If the magnetic catch appears too weak or too strong, it can be easily adjusted by loosening the screws and repositioning them.

7. The anti tip-over kit should be uninstalled before use. Install by following the instructions included with the kit.

Clean with common non abrasive household cleaners. Do not use any cleaner that contains ammonia, such as Window Cleaner.