

VERONA DRESSER

Thank you for selecting a ducduc for nod product.

Please check contents against the components list in these instructions. Also, please ensure there was no damage that may have occurred in shipping. If any components are missing or you find any damage, please contact The Land of Nod at 800-933-9904 before continuing.

This Dresser is not intended to be used as a changing table without an approved Land of Nod changing tray. Use of the Dresser without this tray may result in death or serious injury to your child from falling. Follow all instructions on attaching and using the approved Land of Nod changing tray.

Maximum changing pad dimensions if the Dresser is to be used as a changing table: W16" x L33" x H8".

Pay close attention to the safety warnings in these instructions and on DRESSER labels.

The maximum weight of any child on top of the DRESSER is 45 pounds.

⚠️ WARNING

FALL HAZARD: To prevent death or serious injury, always keep child within arm's reach.

Read all instructions before use of the DRESSER.


Do not use the DRESSER if it is damaged or broken.

Keep instructions for future use.


components

pictures are not drawn to scale

A DRESSER

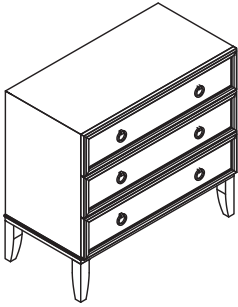


B SMALL SCREW X 2

 

C SAFETY STRAP X 2



 D SAFETY BUCKLE





E PHILIPS HEAD SCREWDRIVER
(not included)



assembly and operation



1

A SAFETY STRAP system has been provided to increase the stability of your DRESSER (A). Choose a spot on the wall preferably on a stud about six inches lower than the top of the DRESSER (A). Insert a SCREW (B) through the hole in one SAFETY STRAP (C) and tighten with SCREWDRIVER (E) to firmly attach the SAFETY STRAP (C) to the wall.

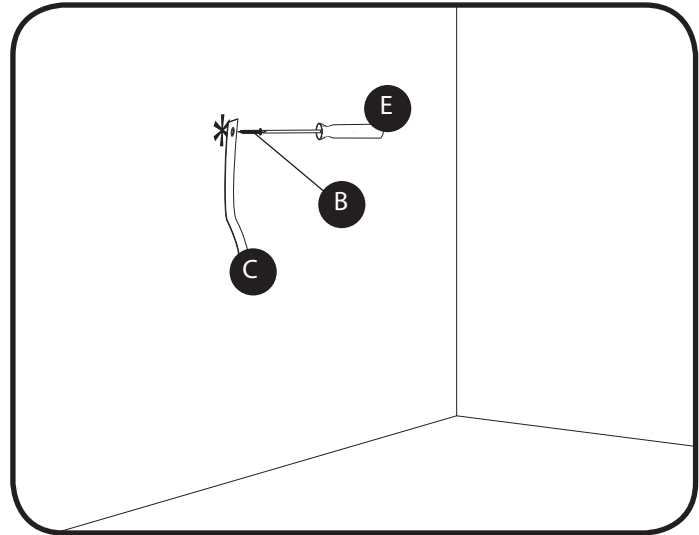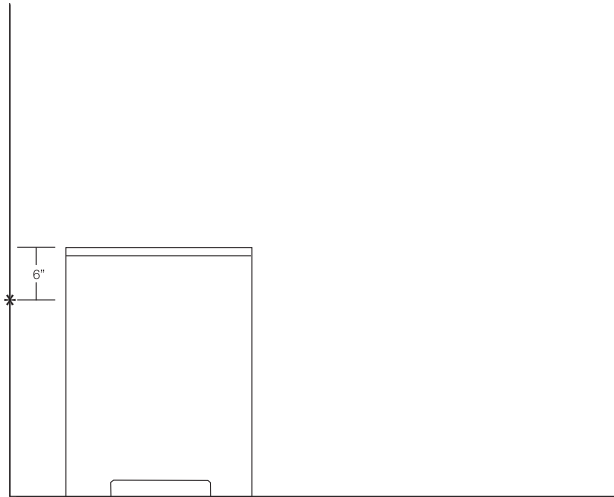




2

Mark a spot on the middle of the back of the DRESSER (A) about six inches lower than the top of the DRESSER (A). Insert other SCREW (B) through the hole in the other SAFETY STRAP (C) and tighten with SCREWDRIVER (E) to firmly attach the SAFETY STRAP (C) to the DRESSER (A).

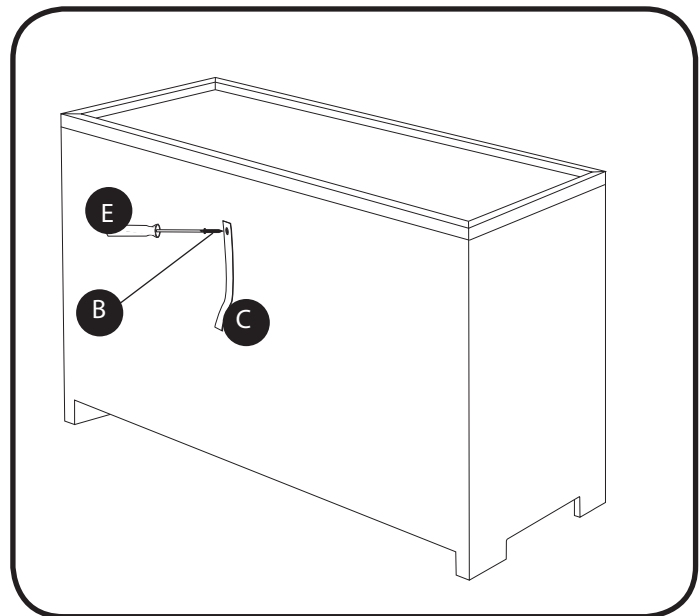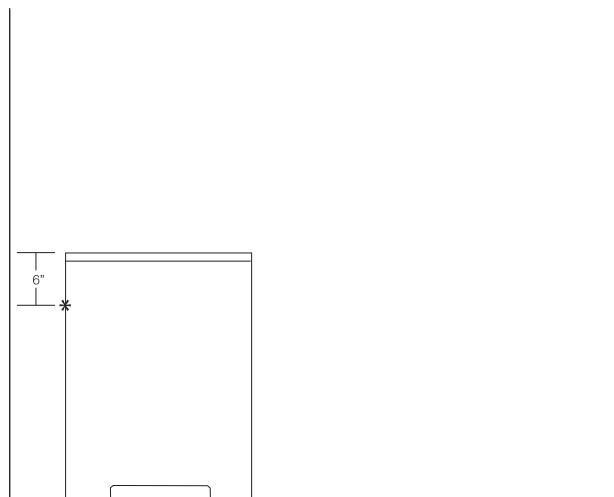


3

Insert free ends of each SAFETY STRAP **C** into either end of the SAFETY BUCKLE **D** as shown in drawing. Pull to tighten both SAFETY STRAPS **C**.

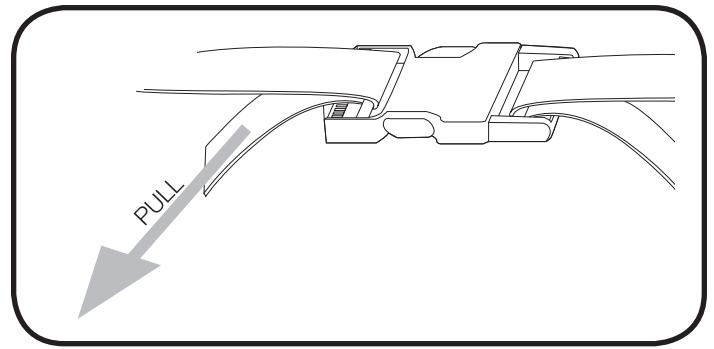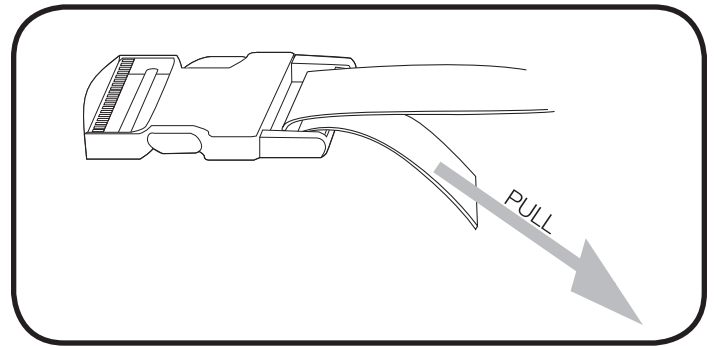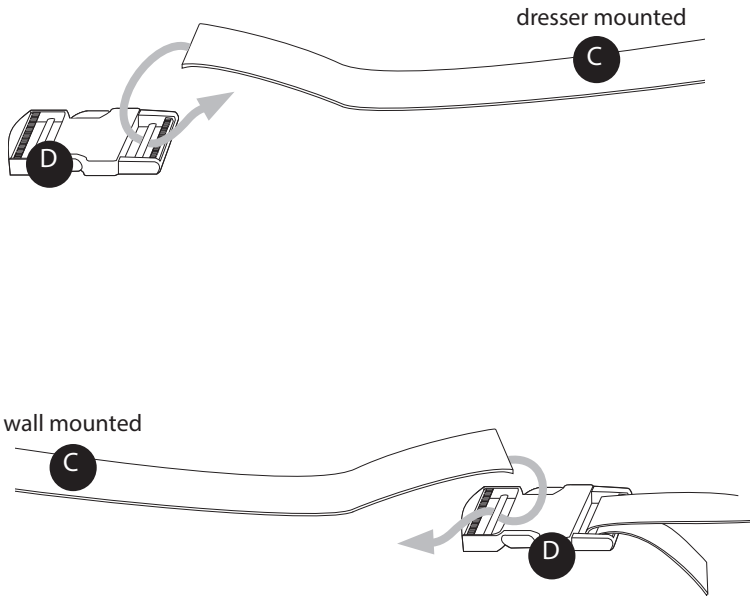

4

To release SAFETY BUCKLE **D**, squeeze sides as shown.
To reattach, push the two ends of SAFETY BUCKLE **D** together.

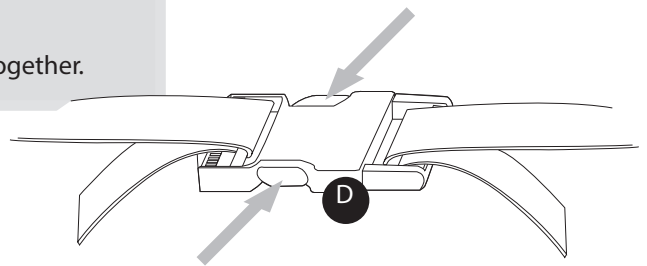

care and cleaning

- Do not scratch or chip the finish. Do not use abrasive chemicals for cleaning. Clean with mild soap on a soft rag. Rinse and dry thoroughly. If you ever refinish this furniture, be sure to use only a non-toxic finish specified for children's furniture.
- Do not attempt to move this DRESSER alone dragging or sliding it across a floor may cause structural damage. A minimum of two people is required to safely lift and reposition the DRESSER.