

 


Thank you for purchasing the **Walden Desk**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Note: 2 people are required to safely assemble this product.


CLEANING AND CARE

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer.

HARDWARE




4 - shelf supports

 

4 - screws

Missing hardware? Please call **800.933.9904** for replacements. NOTE: Contains small parts. Keep away from small children.

 
TOOLS REQUIRED




Phillips head screwdriver

(We recommend the use of hand tools instead of power tools)

 COMPONENTS



1 - shelf

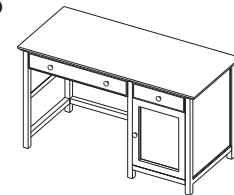


1 - desk assembly




WARNING: Adult Assembly Required

NOTE: Do not over tighten the screws

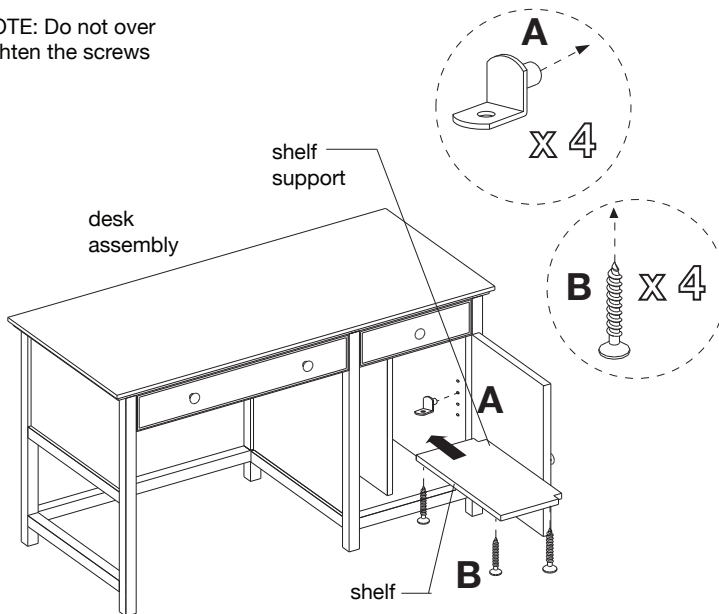

- 1** A. Insert 4 **shelf supports** at desired shelf heights as shown and place **shelf** as shown. Make sure shelf is securely supported by each shelf support.
- B. Secure **shelf** with 1 **screw** per **shelf support** using a **Phillips head screwdriver**. Do not over tighten the screws.

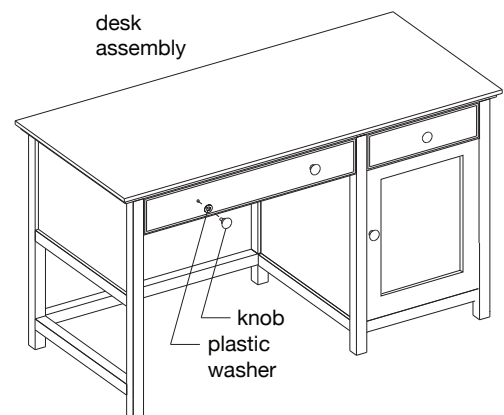

- 2** Detach *knobs* on assembled unit by turning counter-clockwise. Remove *plastic washers*. Re-attach *knobs* by turning clockwise. Assembly is now complete.