

Thank you for purchasing the **Up and Atom Pendant**. This page lists the contents included in the box. Please take time to identify the hardware as well as the individual components of the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Please follow the assembly instructions closely. Improper assembly can result in personal or property damage.

Note: 2 people are required to safely install this product.

COMPONENTS & HARDWARE



2 - canopy
bolt caps




2 - mounting
bolts




2 - wire
nuts



2 - plastic
anchors
(not included)

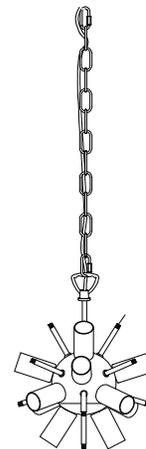


1 - pendant
assembly



1 - mounting plate



12- 25 watt max
candelabra bulb
(INCLUDED)



1 - canopy
(w/ finial)




1 - bracket



12 - balls

Missing hardware? Please call **800.606.6387** for replacements.


TOOLS REQUIRED



flat head screwdriver



electrical tape



phillips head screwdriver



scissors


CLEANING AND CARE

Dust surfaces with a dry soft cloth. Clean shade with a glass cleaner.

IMPORTANT SAFETY INSTRUCTIONS:


If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

We recommend installation of this pendant lamp be performed by a licensed electrician.

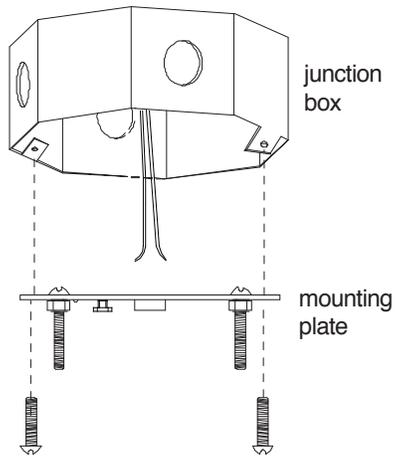


Shut off the main electrical supply from the main fuse box/circuit breaker. Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace. Place the **mounting plate** over the center of the ceiling junction box. Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **phillips head screwdriver**.

1

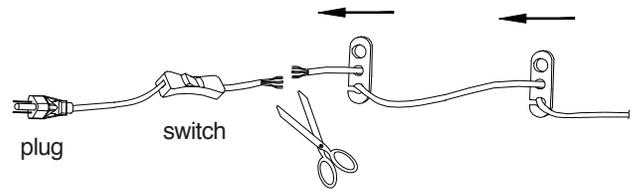


Carefully cut pre-attached plug and switch off **cord** as shown. Discard plug and switch.

2

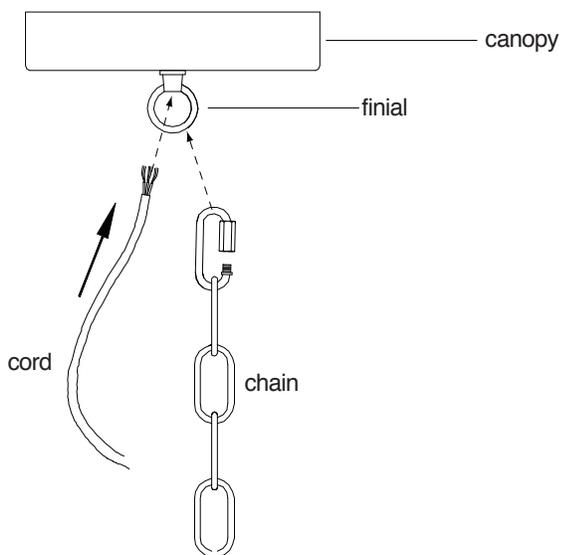


Insert cut end of **cord** into corresponding hole of **finial** and **canopy** as shown. Hook and fasten **chain** to **finial** as shown.

3

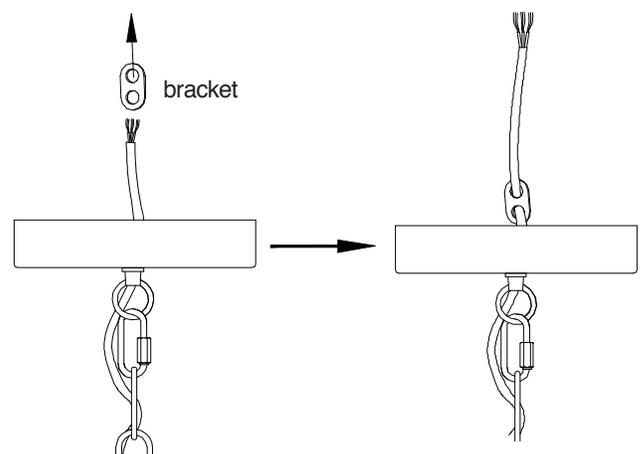

Thread **cord** into **bracket** as shown.

4

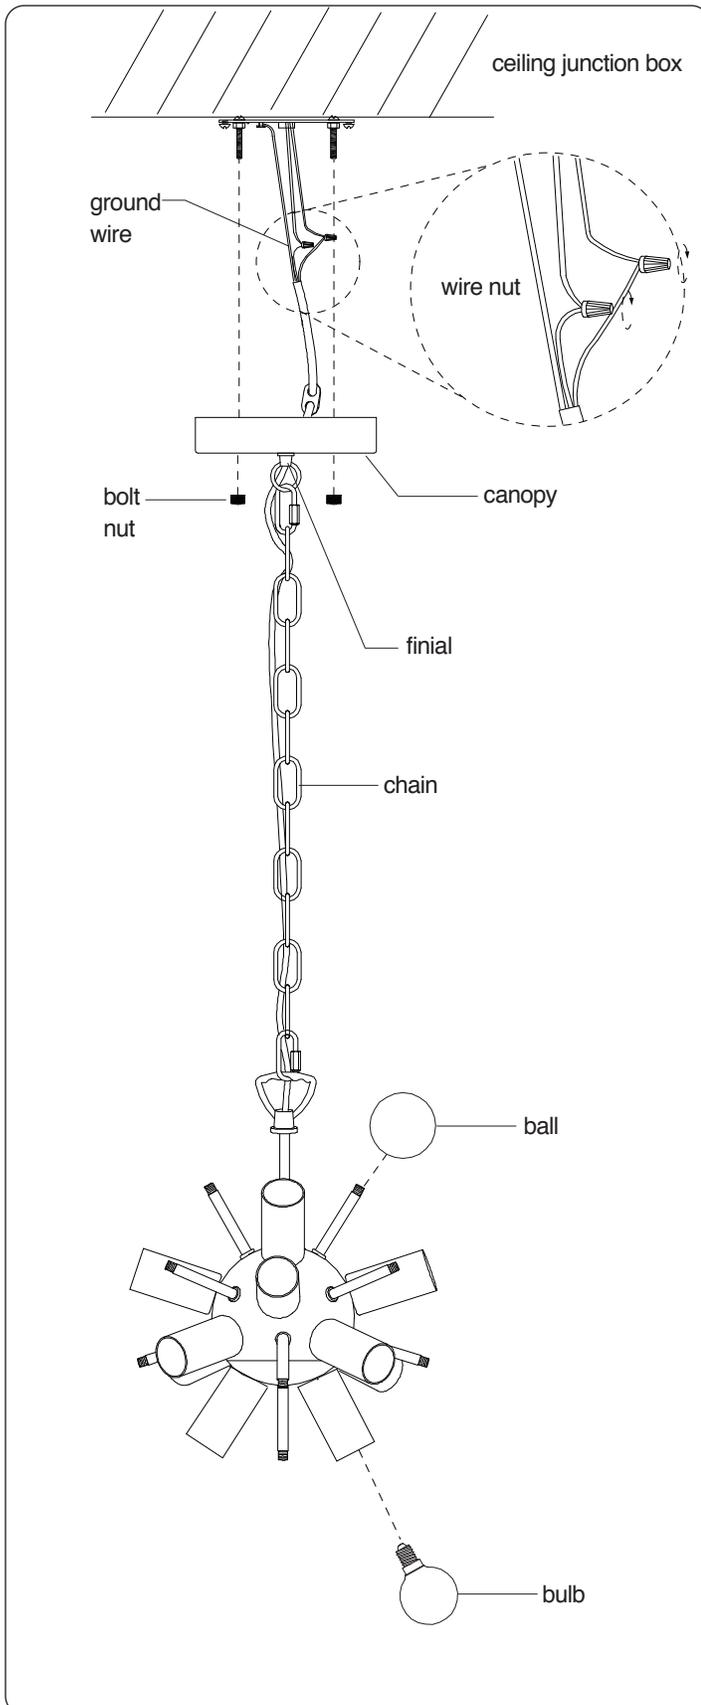

1) Gently pull wiring down from ceiling junction box and allow it to hang

2) Carefully inspect the pendant's fixture wires:

- *Neutral fixture wire* = white
- *Hot fixture wire* = clear
- *Ground wire* = green

3) Wrap *ground wire* of lamp assembly and *ground wire* of junction box together around *ground screw* of mounting plate. Tighten the *ground screw* with a **flat head screwdriver**.

4) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with electrical tape.

5) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

6) Gently tuck the wire connections neatly into the ceiling junction box.

7) Push **canopy assembly** up over the **mounting plate** until it is flush with the ceiling. Align holes in canopy with holes in mounting plate and secure with 2 **canopy bolt caps**.

8) Attach 12 **balls** into corresponding sockets of **lamp assembly** as shown. Turn clockwise to secure.

9) Insert 12 - **bulbs** (included) into corresponding sockets of **lamp assembly**. **DO NOT EXCEED SPECIFIED WATTAGE.**

10) Restore power to junction box and test fixture. Installation is now complete.