



**WARNING: Failure to follow these warnings and instructions could result in serious injury or death**

Follow the information and warnings on bunk end structure and carton. Do not remove these labels.

Always use the recommended size mattress to help prevent the likelihood of entrapment or falls.

- Surface of mattress must be at least 5" (127 mm) below the upper edge of guardrails. The maximum thickness of the bunk mattress is 10"
- Use only mattress which is 74" – 75" long and 37 1/2" – 38 1/2" wide on upper bunk.
- Use only mattress which is 74" – 75" long and 53" – 54" wide on lower bunk.
- Never allow a child under 6 years on the upper bunk.
- Prohibit more than one person on upper bunk.
- Periodically check to ensure guardrail, ladder and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and Prohibit jumping on the bed.
- Always use the ladder for entering and leaving the upper bunk.
- Do not use substitute parts. Contact the Land of Nod for replacement parts at 800.933.9904
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use the guardrails on both sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between bed and wall.
- The use of water or sleep flotation mattresses is prohibited.

**STRANGULATION HAZARD!**


- Never attach or hang items to any part of the bunk that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
- Keep these instructions for future reference.




Thank you for purchasing the **Walden Twin-Over-Full Bunk Bed**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Note: 2 people are required to safely assemble this product.

## HARDWARE



36 - phillips bolts




12 - large screws



4 - small screws



4 - metal dowels



3 - allen bolts




39- spring washers



39- flat washers

Missing hardware? Please call **800.933.9904** for replacements.  
NOTE: Contains small parts. Keep away from small children.

## TOOLS REQUIRED



Phillips head screwdriver




allen wrench (included)

(We recommend the use of hand tools instead of power tools)




**WARNING: Adult Assembly Required**


## COMPONENTS

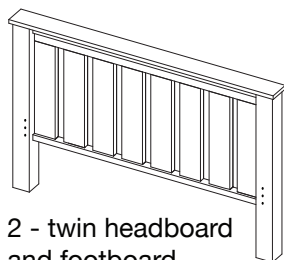


2 - twin headboard and footboard

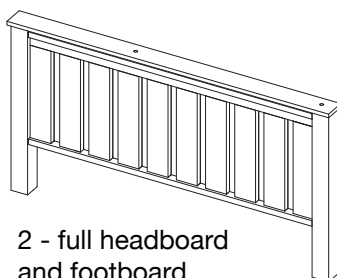


2 - full headboard and footboard

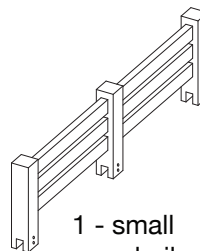


1 - small guardrail

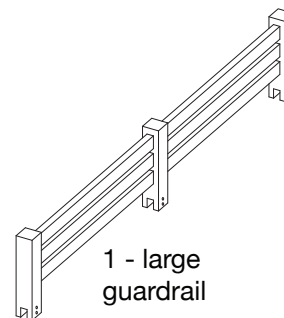


1 - large guardrail

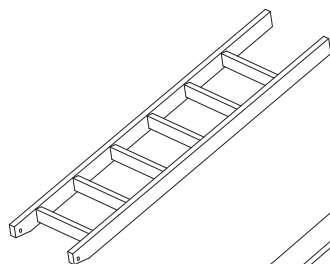


1 - ladder

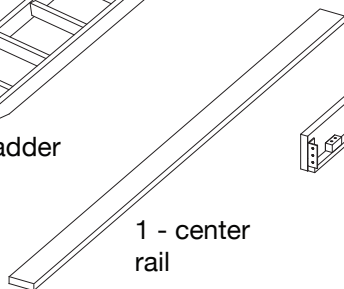


1 - center rail

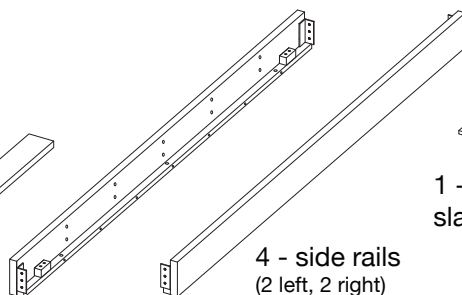

4 - side rails  
(2 left, 2 right)

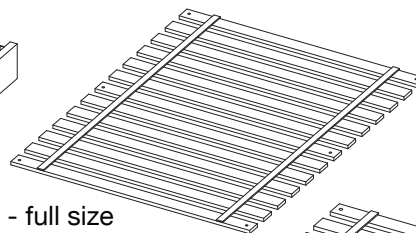

1 - full size slat assembly

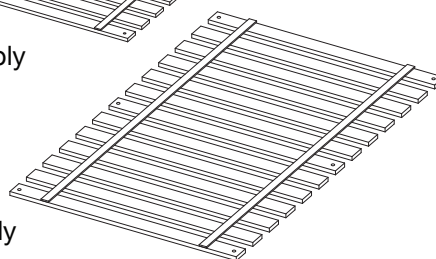

1 - twin size slat assembly

**FULL BED ASSEMBLY**

**1**

With the assistance of another adult, attach each bracket of **left and right side rails** to **full headboard and footboard** with **3 phillips bolts, 3 spring washers** and **3 flat washers**. Secure, but do not over tighten, bolts with a **phillips head screwdriver**.

NOTE: Do not over tighten the bolts

**2**

Fit **center support** into corresponding notches of headboard and footboard as shown. From underneath, attach with **2 small screws**. Secure, but do not over tighten, screws with a screwdriver.

NOTE: Do not over tighten the screws

**3**


Attach **full slat assembly** onto side rails of bed assembly as shown with **6 large screws**. Make sure straps of slat assembly are facing up as shown. Secure, but do not over tighten, screws with a screwdriver. Full bed assembly is now complete.

NOTE: Make sure wood blocks on side rails fit between first and last slats as shown.

**TWIN BED ASSEMBLY**


**4**

With the assistance of another adult, attach each bracket of **left and right side rails** to **twin headboard and footboard** with **3 phillips bolts, 3 spring washers** and **3 flat washers**.

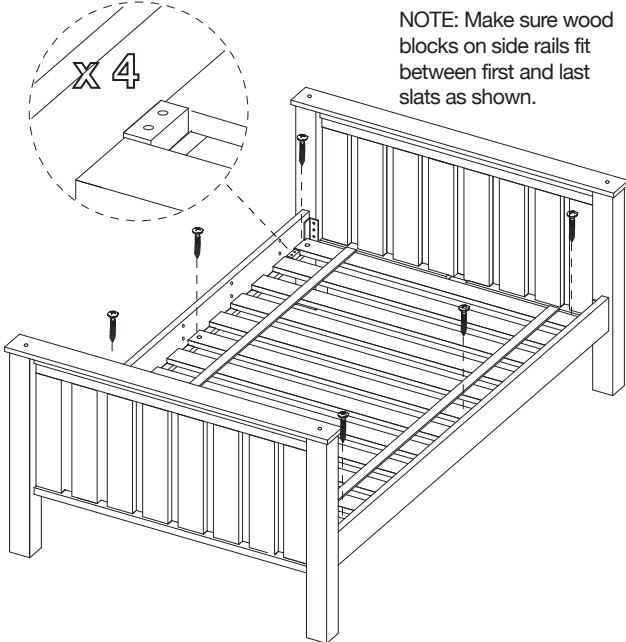


NOTE: Make sure wood blocks on side rails fit between first and last slats as shown.

**5** Attach **twin slat assembly** onto side rails of bed assembly with **6 large screws**. Make sure straps of slat assembly are facing up as shown. Twin bed assembly is now complete.

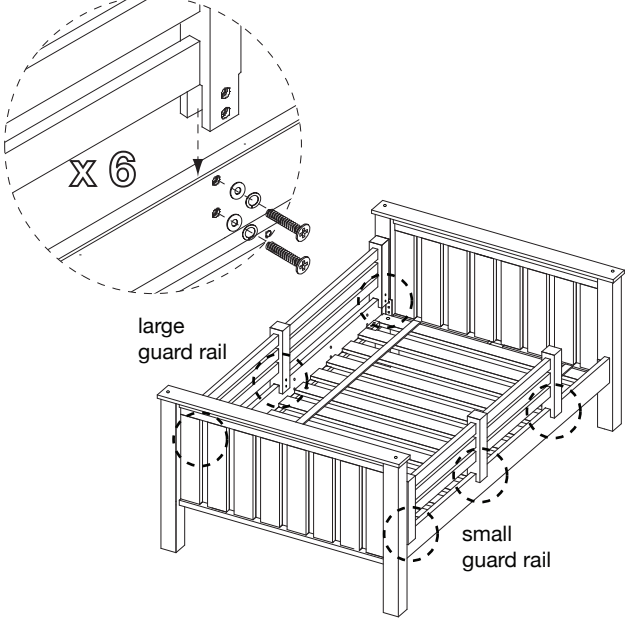


**6** Determine desired orientation of bunk beds. Attach **small and large guard rails** to **twin bed assembly** with **12 phillips bolts**, **12 spring washers**, **12 flat washers** as shown, using a screwdriver.

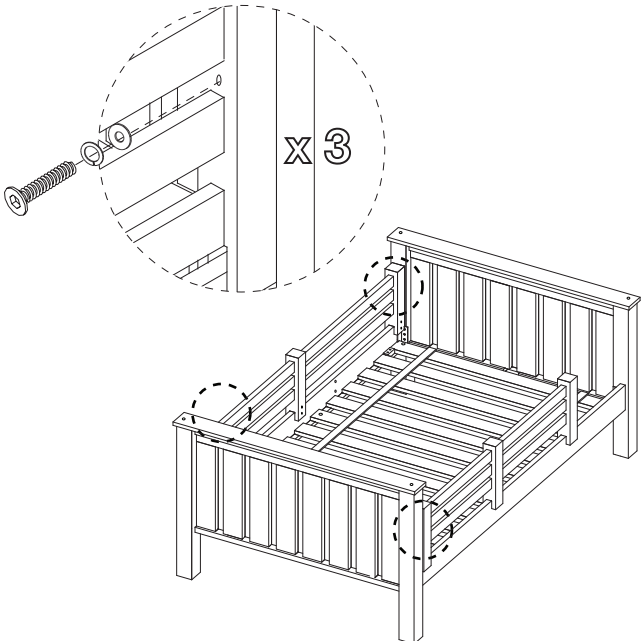


**7** Secure **small and large guard rails** to **twin headboard and footboard** with **3 allen bolts**, **3 spring washers** and **3 flat washers**, using an **allen wrench**.

### TWIN-OVER-FULL BED ASSEMBLY

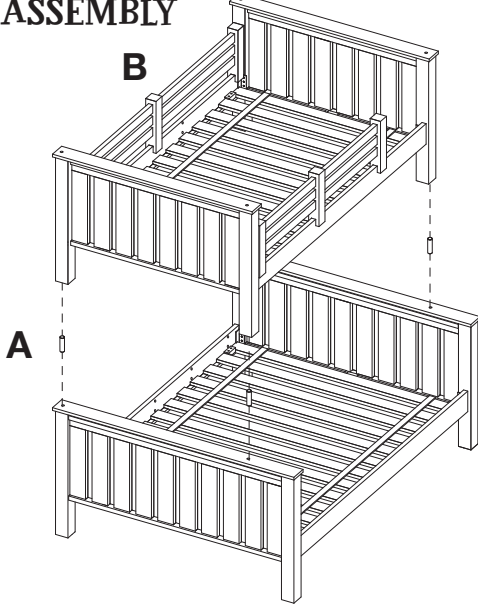

**8** A. Insert **4 metal dowels** into **full bed assembly** as shown.  
B. With assistance of another adult, fit holes of **twin bed assembly** onto corresponding dowels of **full bed assembly** as shown.

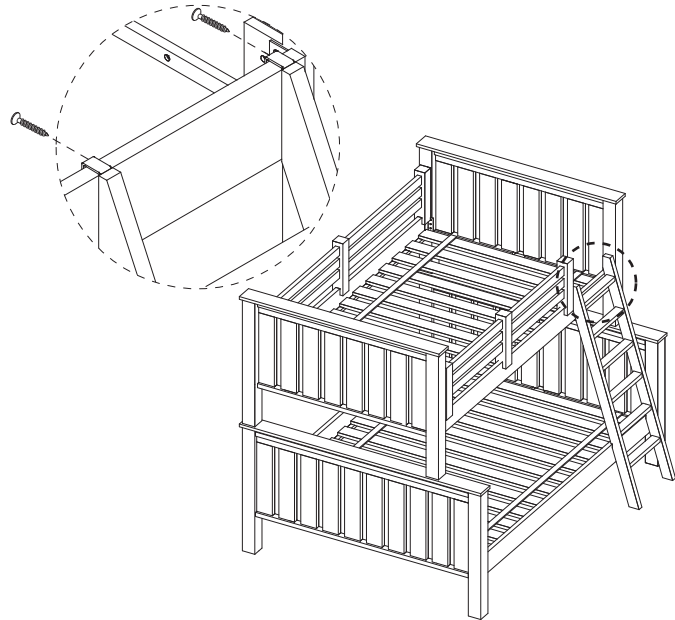

Fit hooks of **ladder** over twin bed assembly as shown. Make sure holes of ladder are aligned with corresponding holes of bed. At this point, secure ladder with 2 **small screws**, using a screwdriver. Assembly is now complete.

9

## CLEANING AND CARE

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer.